 


## NEWCAM Server Configuration

 
 
### Ariva S300

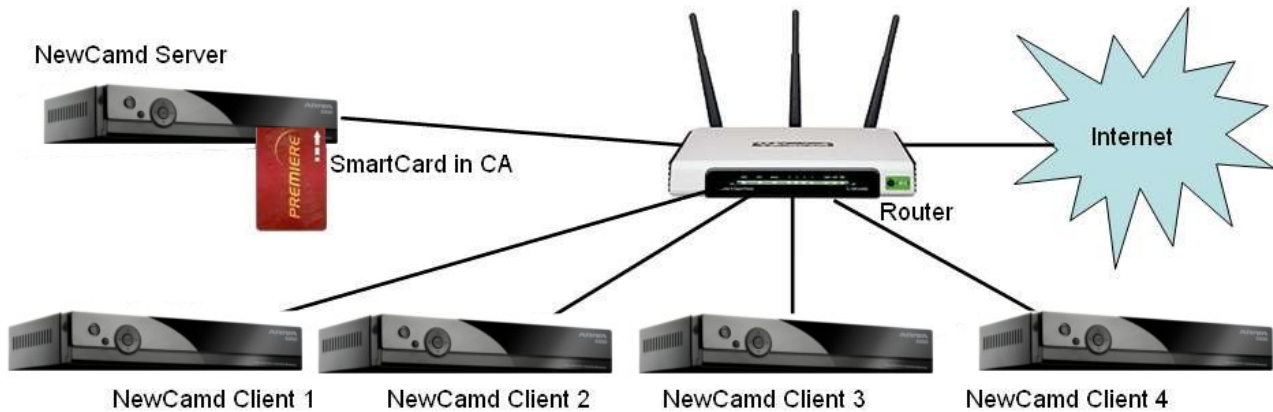



**Attention!** Use firmware version **higher** then Ariva\_S300\_22.2.r35993\_20150331. Server was tested with 4 clients (all models, all manufactures if it support newcamd client protocol).



1. Please connect your receiver to local network via Ethernet or wifi.
2. Change MAC address, save!

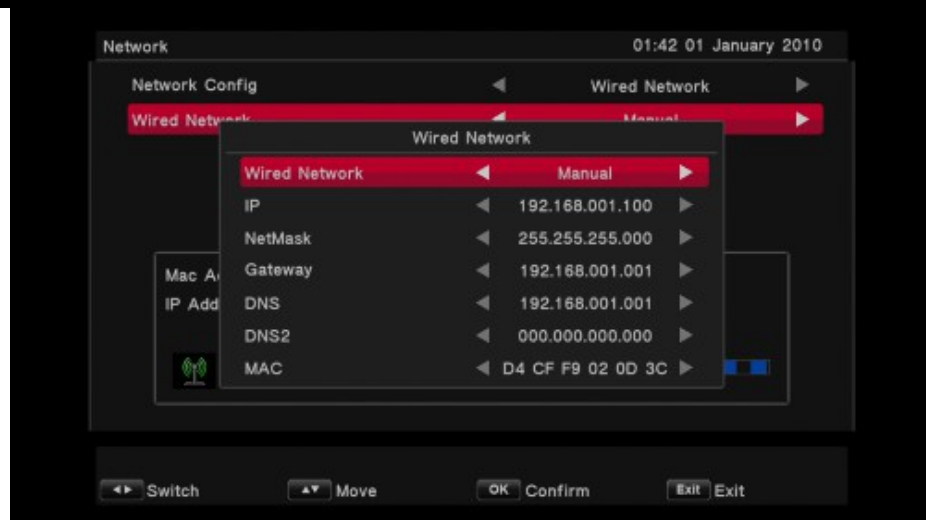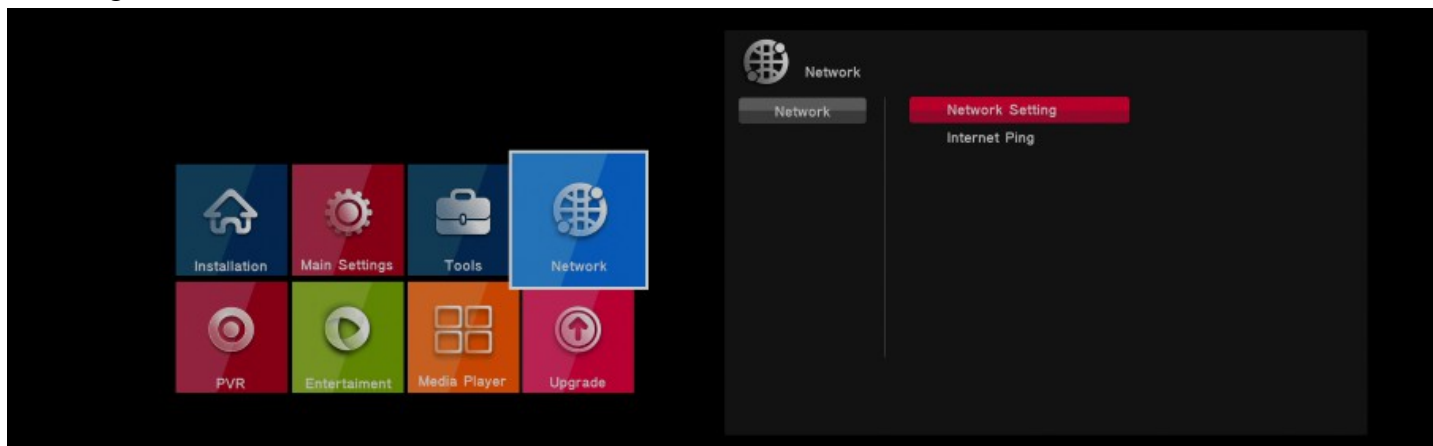

### 3. Go to Tools►CAS►NewCamd Server Setting►

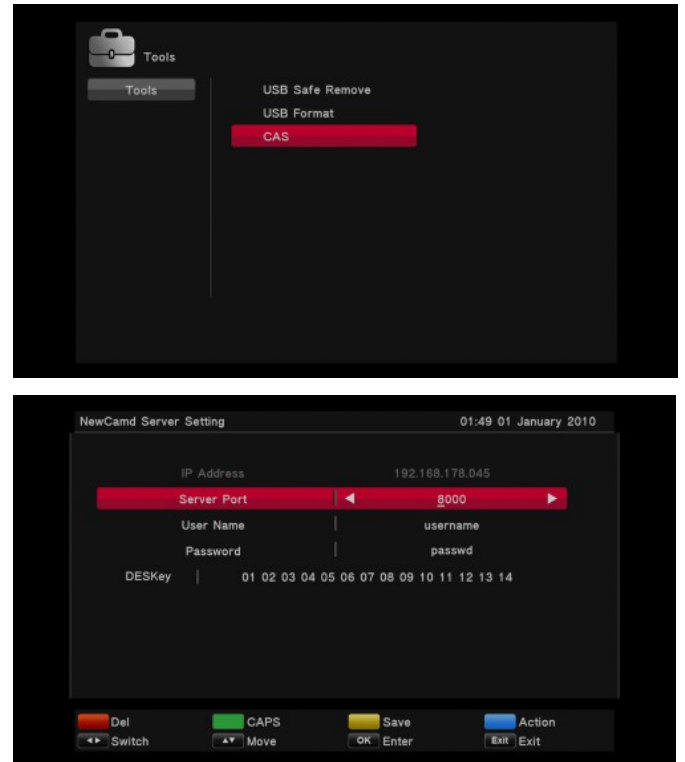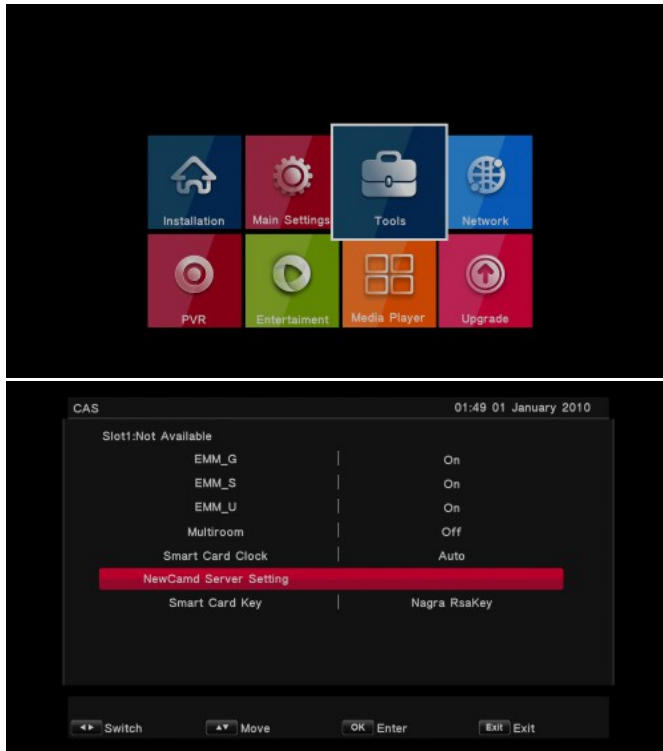  

IP Address: is your server's IP address

Server Port: the communication port

User name: the set user name for newcamd clients

Password: the set password for newcamd clients