



Ferguson Novatek Upgrader via RS-232 manual

1. Connect STB and PC via RS-232.
2. Start Ferguson_Novatek_Upgrader software.
3. Please choose the correct COM port.

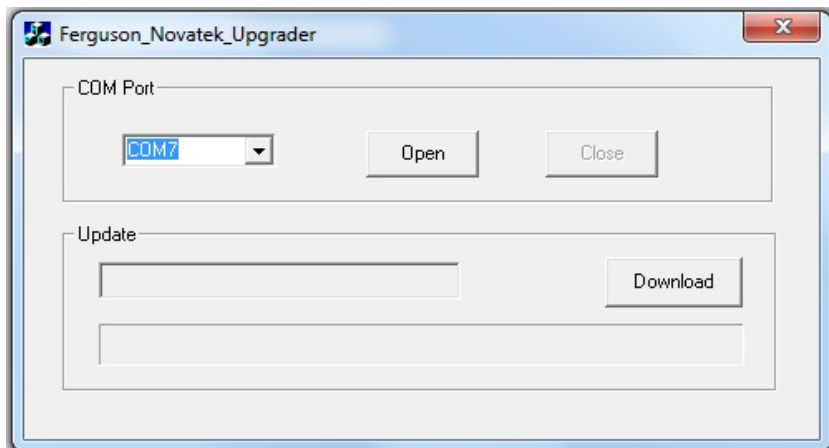

4. After click the button of “Open” and “Download”. Click the button OK.

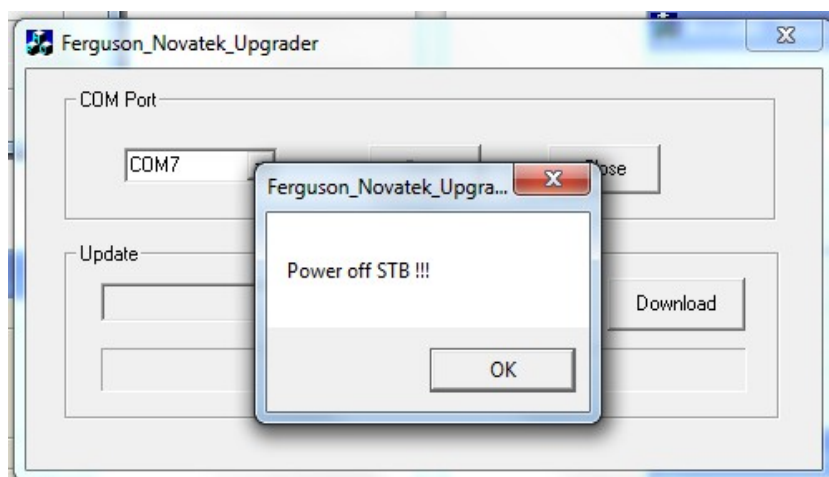

5. Use the file browser to find the SSU upgrade file and confirm the choose with double click.
6. Click the button OK and restart STB. The box will start to update.

