


## Setting up CCCAM home server

### Server

**Step 1.** check IP of server



**Step 2.** Set „homeshare start,, to **On** and press bottom **Login** to start cccam home srver

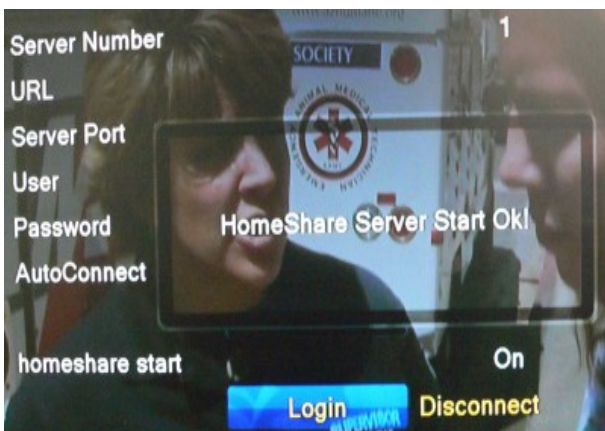

### Client - this easy way you can connect up to 4 clients

Type in proper server IP  
Set port to 8000  
Use as login: 3  
Use as password: 3  
Set AutoConnect to: On  
...and login to start work ;)

